

Directions:

1. Plug in thermostat
2. Turn gas on
3. Check to make sure switch on the back of the heater is in the up position
4. Turn thermostat on to desired temperature
5. If heater does not come on: open side panel on heater and push the reset, close the door and turn thermostat on